

Operating the SteriPEN™


Quick Start Guide

Use SteriPEN™ with clear water. Discolored or dirty water should be pre-filtered until clear prior to SteriPEN™ treatment. See instructions for using the Water Bottle Pre-Filter™ by SteriPEN™ in the User's Guide, page 17.

SteriPEN™ treats two ranges of water volume:

A—up to 16 fl. oz. (0.5 litres)

B—between 16 and 32 fl. oz. (0.5 – 1.0 litre)

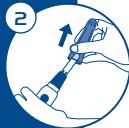

A—To treat up to 16 fl. oz. (0.5 litres) of water:

- ① Insert 4 AA batteries.
- ② Remove lamp cover. *Note: sensors must be dry.*
- ③ Push On/Off button **twice** – green LED (Light Emitting Diode) will flash for up to 15 seconds indicating SteriPEN™ is ready to use. ***Note: SteriPEN™ will not function unless this step is completed before immersing lamp in water.***

For a diagram of SteriPEN™ parts, see the User's Guide, page 13. Read all instructions and warnings in User's Guide before operating.



Operating the SteriPEN™

Quick Start Guide

(Continued from front)



- ④ While green LED flashes the ready signal, dip the ultraviolet (UV) lamp into the water to be treated so that lamp and water sensors are completely immersed. When water is detected, lamp turns on automatically, emitting both UV and visible light. *Note: If visible light is not evident, SteriPEN's lamp is not on, and water should not be consumed.*



- ⑤ Agitate the water by stirring with the SteriPEN™ until the lamp automatically turns off. Once lamp turns off, green indicator LED will turn on to show that the UV dose is complete. *Note: If red LED turns on after lamp shuts off, the dose was not complete. (See "SteriPEN™ LED signals" in User's Guide, page 7).*



- ⑥ Remove SteriPEN™ from water. Dry off lamp and water sensors with clean cloth. Replace lamp cover.

B—To treat between 16 and 32 fl. oz. (0.5–1.0 litre) of water:

Follow Steps 1 and 2 as indicated on front.

- ③ Push On/Off button **once** – green LED will flash for up to 15 seconds indicating SteriPEN™ is ready to use. ***Note: SteriPEN™ will not function unless this step is completed before immersing lamp in water.***

Follow steps 4, 5 and 6 as indicated above.

www.steripen.com



— OVER —
to start

SteriPEN™